




Wireless Timer Control


Wireless timer control with 16 programmable channels to control individual receivers on daily basis at a pre-programmed time and up to maximum of 12 times a day.

Display Information

1. Memory slots. (Max. 12)
2. 24 hour time display
3. Displays 'ON' timer for indicated unit.
4. Displays 'OFF' timer for indicated unit.
5. Timer setting: Random 'ON/OFF' mode for security prevention.
6. Timer setting: Single 'ON/OFF' mode.
7. Timer setting: 'ON/OFF' daily cycle mode.
8. Battery Status.
9. Unit.
10. Signal indication.

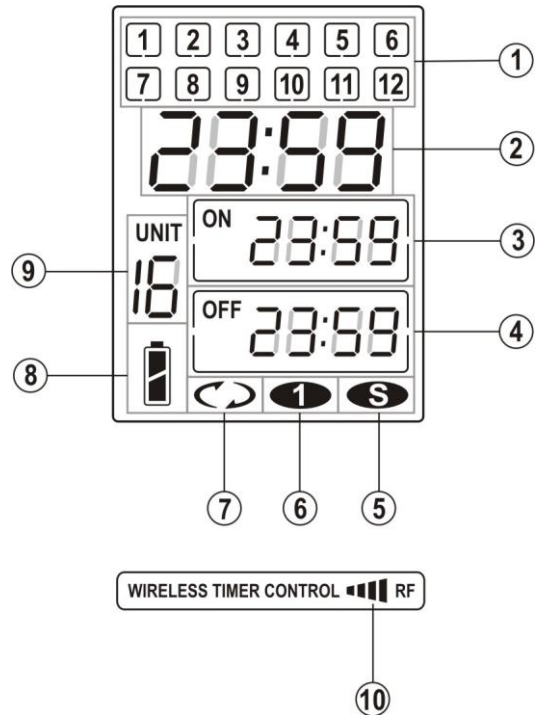

11. ON / OFF' button.
12. 'UP ▲/ DOWN ▼' selection.
13. 'Pause / Delete' button.
14. 'Enter' button.
15. Clock.
16. Timer.
17. Unit code selection.

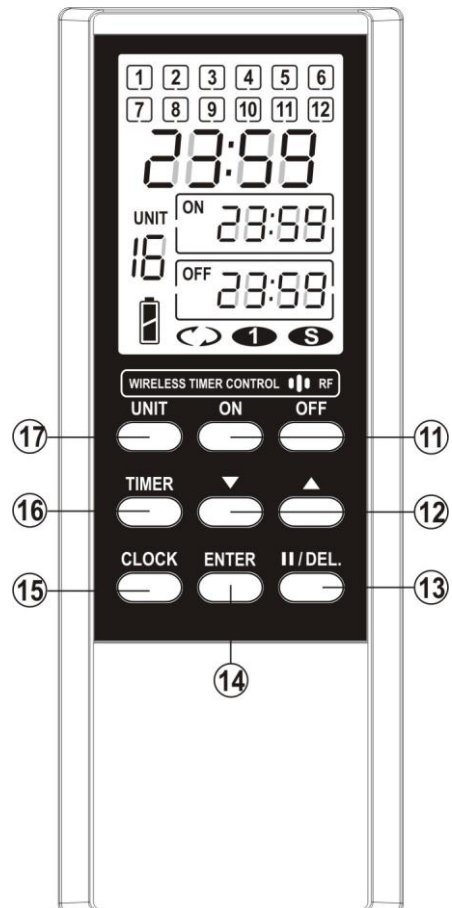

Set up clock

The clock has a 24 hour display.

Before programming the control, enter the correct time.

- Press the **CLOCK** button for 3 seconds and the hours of the clock start flashing (Fig.1)
- Use the ▲ and ▼ buttons to set the hour and press **ENTER** (Fig.2)
- Repeat the above for the “minutes” and again press **ENTER** (Fig.3)

The clock is now programmed

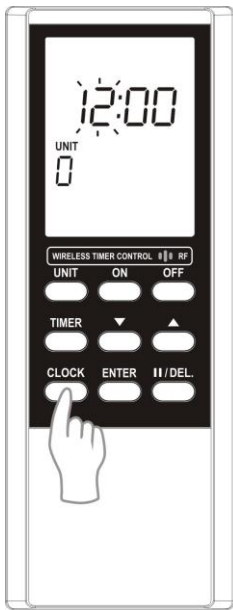


Fig. 1

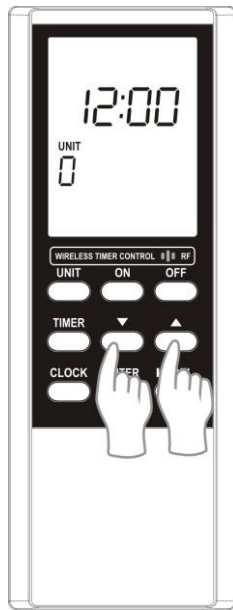


Fig. 2

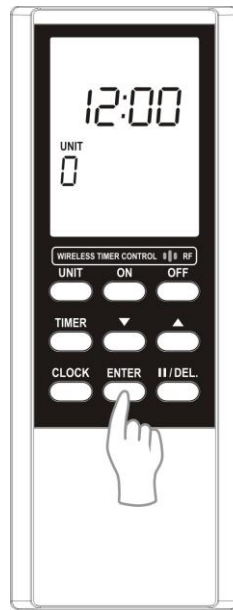


Fig. 3

How to link code

- Connect power to receiver
- Select the desired unit by pressing the ‘**UNIT**’ button. (Fig.4)
- Bring timer control near receiver, push once the self learning button on receiver, this will enter learning mode. While in learning mode, the LED on receiver will flash to indicate ready for programming.
- Then on timer control press ‘**ON**’ button once, the receiver will flash twice to indicate programming is confirmed and completed.

! During leaning mode if within 10 seconds no signal is detected it will automatically return to stand-by mode.



Fig. 4

To change or delete code:

- Select the desired unit by pressing the ‘**UNIT**’ button.
- Bring timer control near receiver, push once the self learning button on receiver, this will enter learning / deleting mode.

While in learning / deleting mode, the receiver LED will flash to indicate ready for deleting.

- Then on timer control press '**OFF**' button once, the LED on receiver will flash to indicate programmed code is deleted.

To delete all code:

- On receiver hold down the self learning button on receiver for 6 seconds, this will enter learning / deleting mode.
While in learning / deleting mode, the receiver will flash to indicate ready for deleting.
- Then press again the self learning button, the LED on receiver will flash to indicate all code is deleted.

Standard ON/OFF/DIM function

- Press the '**UNIT**' button to select the receiver you wish to operate.
- Press the '**ON**' button once to switch the unit 'On'. Press the '**ON**' button again to start the dimming cycle. Press again '**ON**' to stop at the desired level of light.
- Press '**OFF**' to switch 'Off' the unit.
- When pressing '**ON**' again the light will come on at the previously set intensity.

Programming timer

- Press the '**TIMER**' button for 3 seconds and the number 1 on the LCD screen will start flashing. This number represents 1 of the 12 memory slots of the timer. (Fig. 5)



Fig.5

- Press '**ENTER**' to confirm the selected memory slot.
- Press the '**UNIT**' button and select one of the 16 units that you wish to program. (Fig.6)
- Press '**ENTER**' and the **ON** digits will start flashing. (Fig.7)
- With ▲ and ▼ select the hour and press '**ENTER**' (Fig.8)
- With ▲ and ▼ select the minutes and press '**ENTER**' (Fig.9)
- The **OFF** digits will now start flashing (Fig.10)
- With ▲ and ▼ select the hour and press '**ENTER**' (Fig.11)
- With ▲ and ▼ select the minutes and press '**ENTER**' (Fig.12)

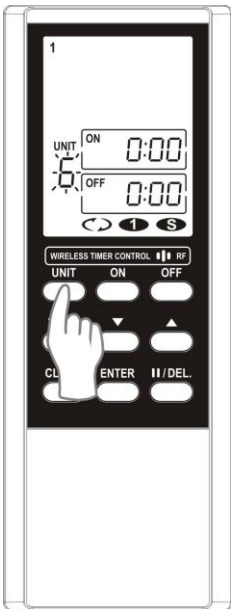


Fig. 6

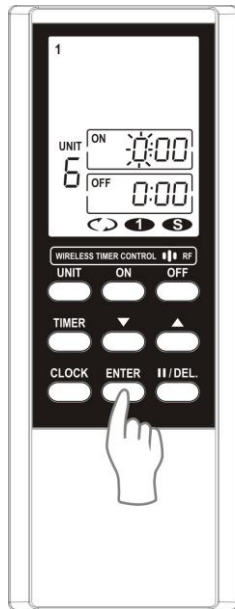


Fig. 7

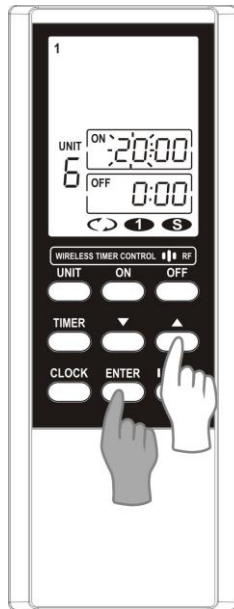


Fig. 8

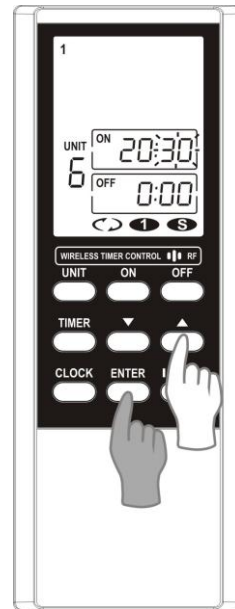


Fig. 9

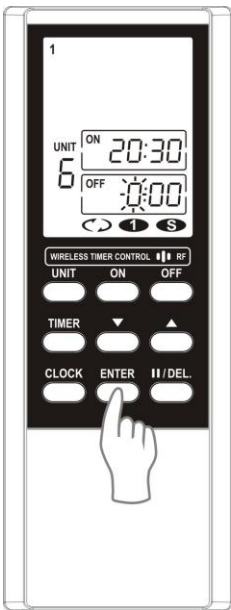


Fig. 10

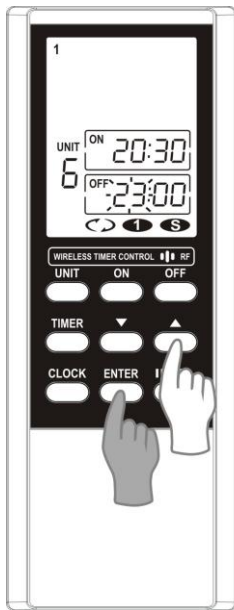


Fig. 11

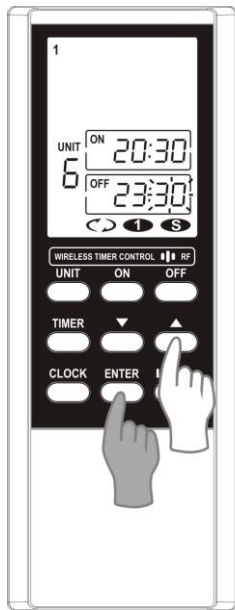


Fig. 12

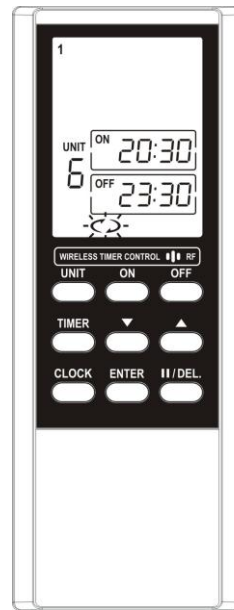

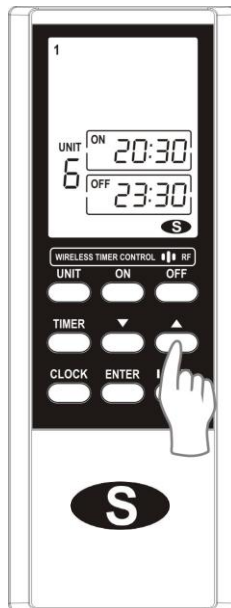
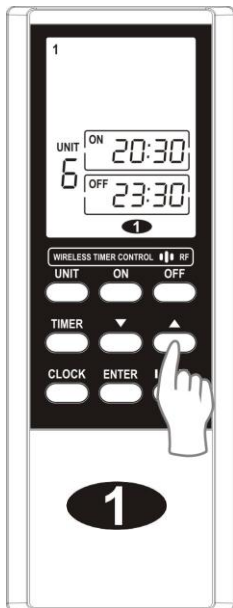



Fig. 13

-  will start to flash. (Fig.13)
- With ▲ and ▼ select one of the three symbols you wish to program as.



 Daily timer.

 Once only timer.

 Random timer.

- Press 'TIMER' to return to Main Display.

! You can reprogram a timer simply by overlapping the memory slots.

※Hint※ During any setting, press the 'TIMER' button to exit out and restart your settings again.

Pausing a Timer

The 'II / DEL' button allows you to block the current pre-programmed setting manually.

- Press 'TIMER' button for 3 seconds, use ▲ and ▼ to select one of the 12 memory slots to be temporarily blocked. Press the 'II / DEL' button followed by 'ENTER', this will then temporary block the selected program setting. (Fig.14)
- Press 'TIMER' to return to Main Display.
- A square box around that number will show it is temporary blocked. (Fig.15)

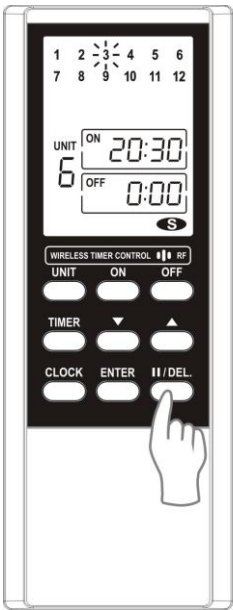


Fig. 14

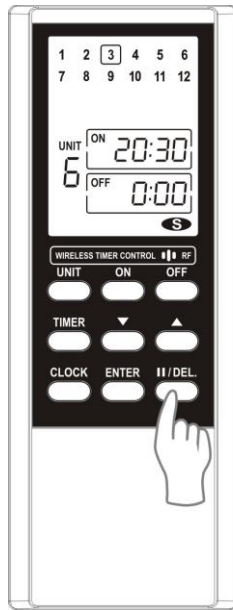


Fig. 15

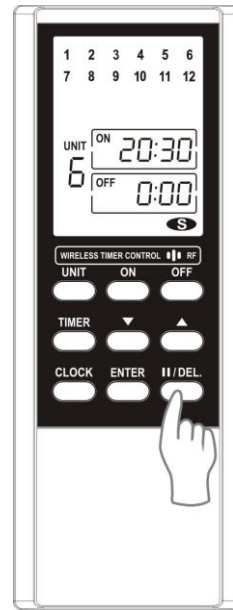


Fig. 16

Deactivate Pause

To unblock the programmed setting.

- Press 'TIMER' button for 3 seconds, use ▲ and ▼ to select one of the 12 memory slots to be temporarily blocked. Press the 'II / DEL' button followed by 'ENTER', this will then temporary unblock the selected program setting.
- Press 'TIMER' to return to Main Display.
- The number will return to normal indicating program is now unblocked. (Fig.16)

Deleting programme timer

- Press 'TIMER' button for 3 seconds, use ▲ and ▼ to select the unit you wish to remove from the program.
- Press the 'II / DEL' button for 3 seconds. The display will start to flash.
- Press 'ENTER', the program will then be deleted.
- Press 'TIMER' to return to Main Display.

Child protect mode

To avoid your settings being changed, a child protect mode has been built-in.

The timer control will be locked and LCD screen will indicate 'CP'

Activating CP mode

- Hold down both 'ENTER' & 'II / DEL' button for 3 seconds. (Fig.17)

De-activating CP mode

- Hold down both 'ENTER' & 'II / DEL' button for 3 seconds.


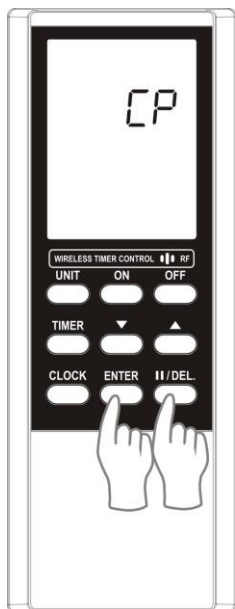


Fig. 17

Battery Change

- Open battery compartment and remove battery.
- Replace the 'CR2032' battery, making sure the '+' positive terminal is facing up or replace the 'A23' battery making sure '+/-' is correct.
- Replace back the battery cover.

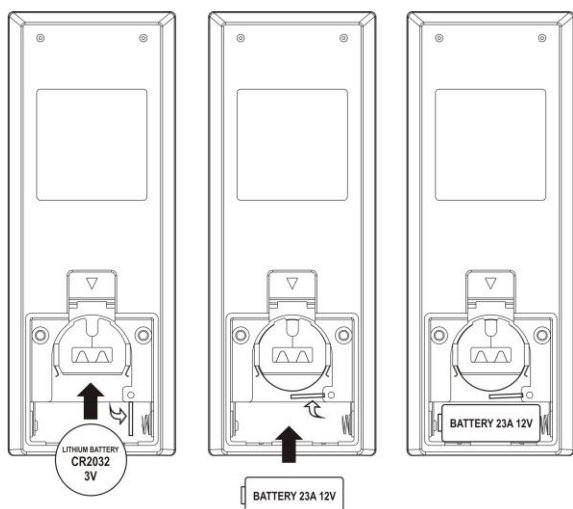

Trouble Shooting

Text on display is unclear.

- Press '**TIMER**' button for 3 seconds. If there is no text or remains unclear, change the lithium battery 3V CR2032.

No red RF signal indicator.

- Check the 12V A23 battery and replace if required.

Specifications.

Frequency : 433.92 MHz

LCD Power : 1 x Lithium battery 3V CR2032

RF Power : 1 x 12v A23 battery